




RUGGED COVER

Bracket Installation Instructions For The Ford Sport Trac 07-Current Models

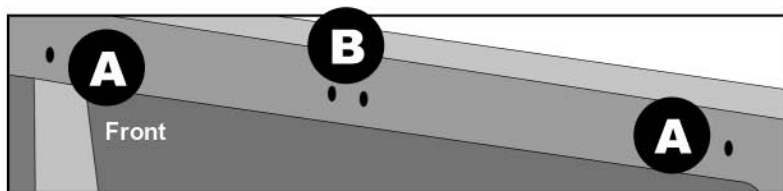

- A.** Remove the factory installed plastic hole covers located in the front and rear of each side of the truck bed.
- B.** Unscrew the two center factory installed screws.


1. Line up bracket to three hole positions.
2. Install the bracket with the (2) center factory screws that you removed in step B and (1) screw for each side from installation kit provided. Secure the bracket to the side of the truck bed by tightening the front, center and rear screws.
3. The two brackets are the same and can be used on either passenger or driver side of the truck bed.

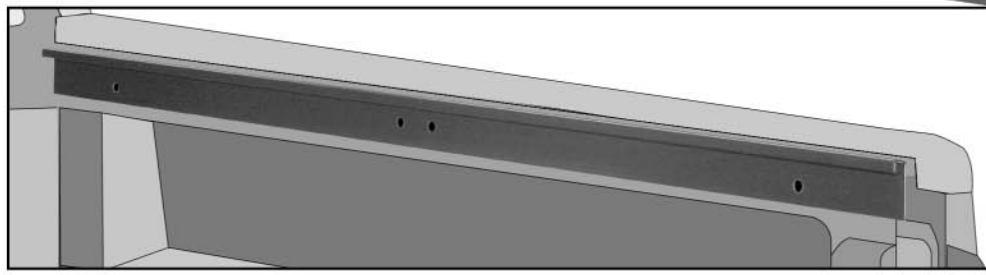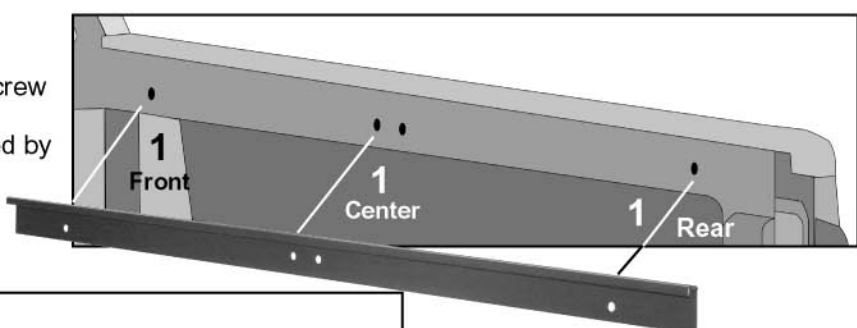

D. Tonneau Cover
positioning of the front clamp and safety strap.



RUGGED COVER

Bracket Installation Instructions For The Honda Ridgeline 05-Current Models

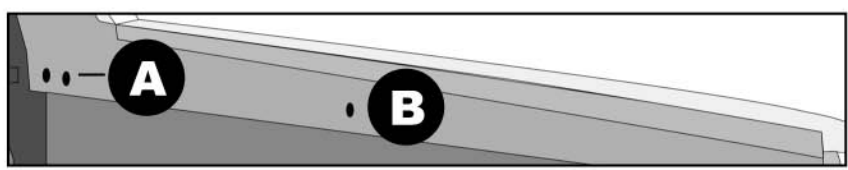

- A.** Remove rear screw from the tie-down shown in picture labeled A.
- B.** Remove screw located in center rail of the bed shown in picture labeled B.

1. Line up the bracket so that the rear portion rests on top edge of pillar post.
2. Line up front and center holes.
3. Use the smaller screw for the center hole of the bracket, provided with the installation kit.
4. Use the larger screw for the front hole of the bracket, provided with the installation kit.
5. Secure bracket to the side of truck bed by tightening front and center screws.

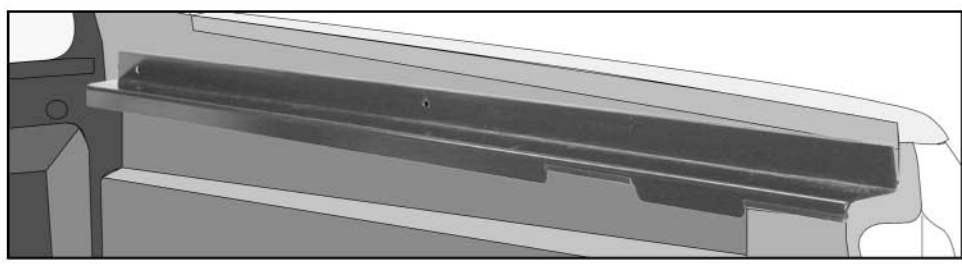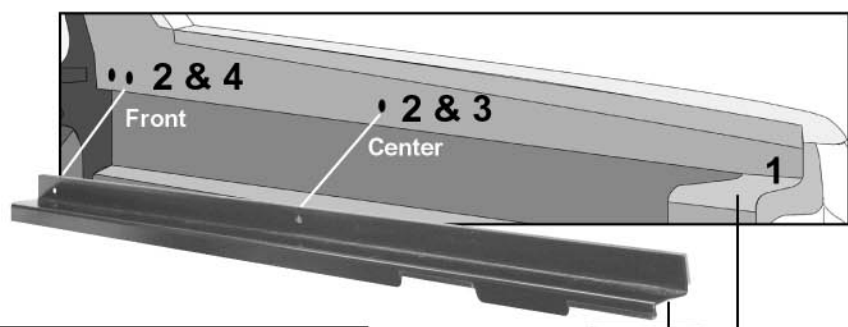

D. Tonneau Cover
positioning of the front clamp and safety strap.