

RUGGED COVER


SNAP TONNEAU BULLETIN

NOW AVAILABLE

Snap Improvement Retro Fit Kit

Prevents Snaps From Coming Out of Track

Installation is Quick and Easy

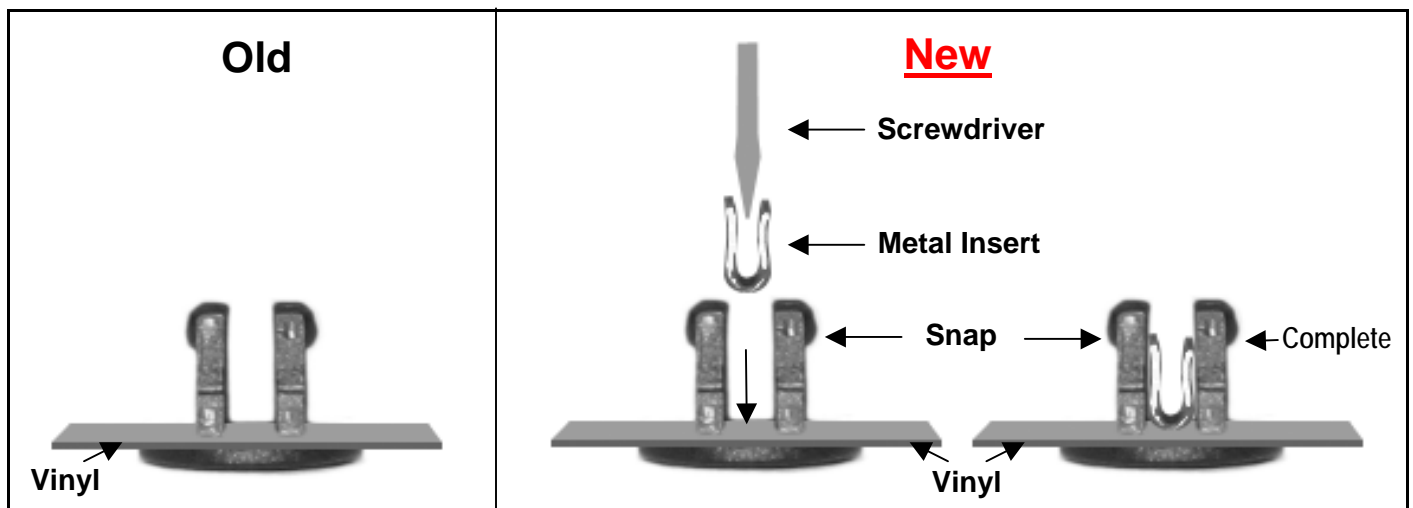

Instructions for Snap Retro Fit Kit:

1. Do not remove plastic snap from vinyl cover.
2. Push metal insert between prongs with screwdriver.

Inventory Notice

As of August 23rd 2010 All Orders Shipped from Rugged Liner Will Have The New Snap Improvement



Contact Customer Service For Details

1-800-433-3604